




## Installation / User Manual

### APsystems ECU-C Energy communication unit with advanced functions

Rev 2.0

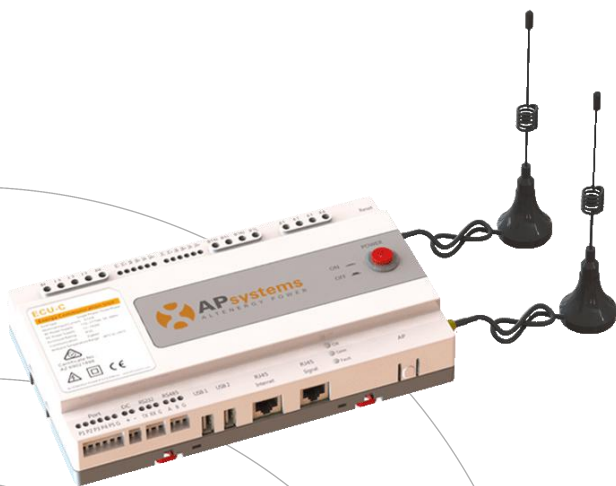





© All Rights Reserved

# Table of Contents

|  |           |
|--|-----------|
| <b>Important Safety Instructions.....</b>                        | <b>2</b>  |
| <b>1.Introduction.....</b>                                       | <b>3</b>  |
| <b>2.Interface Explanation.....</b>                              | <b>4</b>  |
| Interface Layout.....  | 4         |
| 2.1 AC Input Port.....   | 5         |
| 2.2 DC Input Port.....   | 5         |
| 2.3 RJ45 Ethernet Network Port.....                              | 5         |
| 2.4 RJ45 Signal（Only for Australia）.....                         | 5         |
| 2.5 AP.....  | 6         |
| 2.6 Power.....   | 6         |
| 2.7 USB Interface.....   | 6         |
| 2.8 Reset.....   | 6         |
| 2.9 LED.....   | 6         |
| <b>3.Hardware Installation.....</b>                              | <b>7</b>  |
| 3.1 Preparation.....   | 7         |
| 3.2 Selecting an Installation Location for the ECU-C.....        | 7         |
| 3.3 Cable Connections.....                                       | 9         |
| 3.4 RJ45 Signal connection.....                                  | 9         |
| 3.5 Internet Connection.....                                     | 9         |
| 3.6 Current transformer interface.....                           | 11        |
| 3.7 Contactor connection.....                                    | 12        |
| <b>4.Basic Operation.....</b>                                    | <b>13</b> |
| 4.1 Restore the factory set operation.....                       | 13        |
| <b>5.Local Network Interface.....</b>                            | <b>14</b> |
| 5.1 Connecting to the ECU-C via the Local Wireless.....          | 14        |
| 5.2 Home Screen.....   | 14        |
| 5.3 Real-time Data Screen.....                                   | 16        |
| 5.4 Meter Screen.....  | 18        |
| 5.5 Administration Screen.....                                   | 20        |
| <b>6.Remote ECU-C Management (EMA).....</b>                      | <b>32</b> |
| 6.1 ECU-C Configuration/ECU-C Status Page.....                   | 33        |
| 6.2 Setting the ECU-C Time Zone.....                             | 34        |
| 6.3 Managing Inverter IDs and Updating the Inverter ID List..... | 34        |
| <b>7.Technical Data.....</b>                                     | <b>36</b> |

## Important Safety Instructions

Symbols replace words on the equipment, on a display, or in manuals

|  |   |
|--|---|
|  <b>APsystems</b> | Trademark.  |
|                   | Caution, risk of electric shock.  |
|                   | Equipment protected throughout by double insulation or reinforced insulation  |
|                   | CE mark is attached to the solar inverter to verify that the unit follows the provisions of the European Low Voltage and EMC Directives.  |
| Qualified personnel  | Person adequately advised or supervised by an electrically skilled person to enable him or her to perceive risks and to avoid hazards which electricity can create. For the purpose of the safety information of this manual, a "qualified person" is someone who is familiar with requirements for safety, refrigeration system and EMC and is authorized to energize, ground, and tag equipment, systems, and circuits in accordance with established safety procedures. The inverter and endues system may only be commissioned and operated by qualified personnel. |

# 1.Introduction

The APsystems Energy Communication Unit (ECU-C) is the information gateway for our microinverters. The unit collects module performance data from each individual microinverter and transfers this information to an Internet database in real time. Through the APsystems Energy Monitoring and Analysis software, the ECU-C gives you precise analysis of each microinverter and module in your solar installation from any web-connected device. The ECU-C's integrated http web server offers the simplest and most flexible network integration of any data logger on the market. The user-friendly browser-based interface lets you access your solar array in seconds.

## Features

- Collects individual module and microinverter statistics
- Remote communication
- Requires no additional wiring
- Applicable commercial system

The APsystems Microinverter is used in utility-interactive grid-tied applications, and is made up of three key elements:

- APsystems Microinverter
- APsystems Energy Communication Unit (ECU-C)
- APsystems Energy Monitoring and Analysis (EMA) web-based monitoring and analysis system

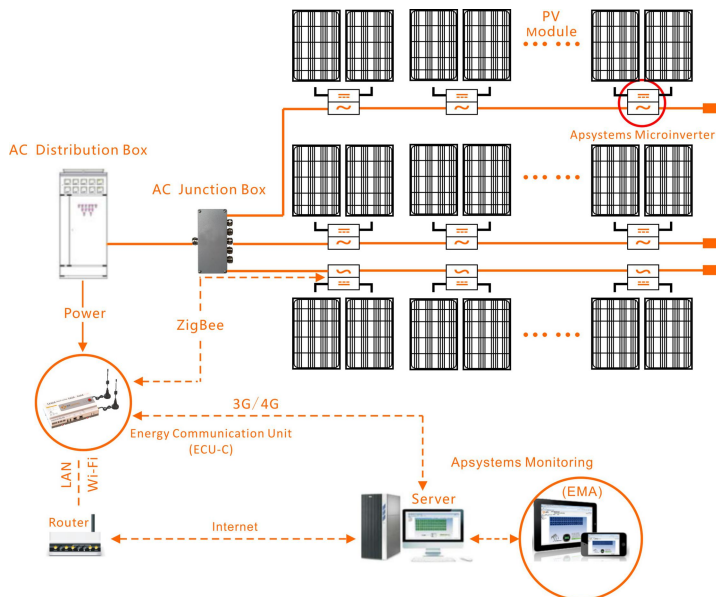


Figure 1

## 2.Interface Explanation

### Interface Layout

The ECU-C interface includes, (figure 2)from left to right, are AC Input, Production CT, Consumption CT, Relay Output, Relay Feedback Input, Reset.

(figure 3)from left to right, are Port, DC, RS232, RS485, USB1, USB2, RJ45, Internet, RJ45 Signal, AP.

(figure 4)from left to right, are antenna(Zigbee), antenna(Wifi).

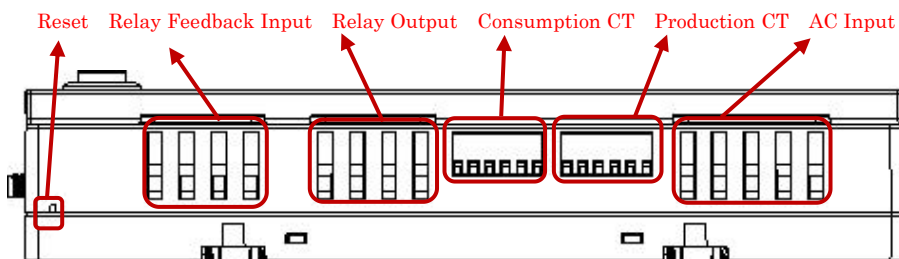


Figure 2

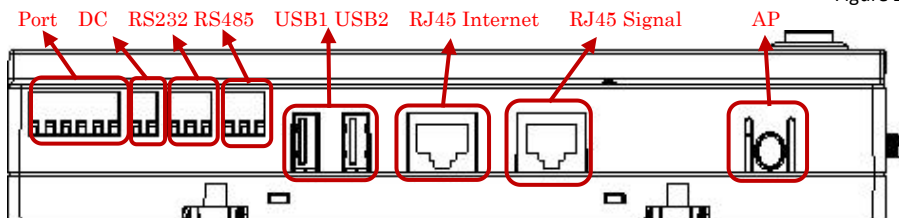


Figure 3

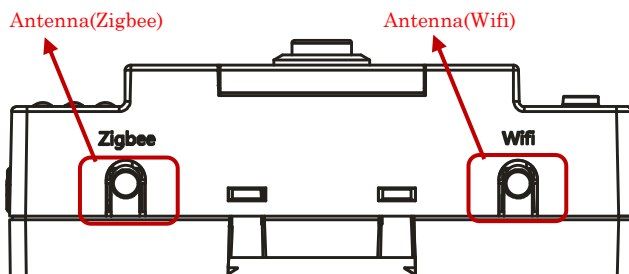


Figure 4

## 2.Interface Explanation

### 2.1 AC Input Port

The AC Input port connects power through the power line.If only single-phase power is needed, the L1 must be connected.

|              | L1 | L2 | L3 | N | PE |
|--------------|----|----|----|---|----|
| Three Phase  | √  | √  | √  | √ | √  |
| Single Phase | √  | ×  | ×  | √ | √  |



#### NOTICE

The AC input power should be assembled with disconnector(e.g. when the current is bigger than 1A, the disconnector should be operated).

### 2.2 DC Input Port

The DC Input port connects power through the 16V DC power line.

### 2.3 RJ45 Ethernet Network Port

The ECU-C allows the user to communicate with the EMA, or log in to the ECU-C's local page in the absence of the wired LAN and WLAN, to set up the system and view the system data via Ethernet network port.



#### NOTICE

Ethernet cable connection is recommended for stable communication.

### 2.4 RJ45 Signal （Only for Australia）

The RJ45 Signal is designed for DRM0/5/6/7/8, it should be connected by RJ45 connector in the package otherwise the inverters will not work.

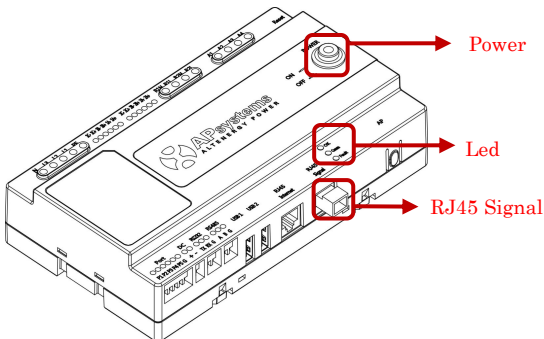


Figure 5

## 2.Interface Explanation

### 2.5 AP

Press the AP button to turn on AP. Then the ECU can be scanned by phone. You can press the button again to turn off AP. If you don't turn off AP, ECU will turn off it automatically in one hour.

### 2.6 Power

Press the button, ECU will be powered on. Press the button again, the button would bounce back and ECU will be powered off.

### 2.7 USB Interface

The USB interface is reserved.

### 2.8 Reset

Press the Reset button for three seconds or longer, and the ECU-C will automatically return to the default settings.



#### NOTICE

The historical power generation won't be cleared.

### 2.9 LED

The OK light will blink when ECU-C starts up, and it will keep on after registering.

The Comm light will be on when the ECU-C connects to EMA.

The Fault light will be on when the ECU-C breaks down.

## 3. Hardware Installation

### 3.1 Preparation

Make sure you have the following components ready before beginning to install the ECU-C:

- A broadband Internet connection available for your use.
- A broadband router with either a CAT5 Ethernet, or a wireless router .
- A laptop with a web browser (to view the APsystems EMA online monitoring application).
- A pre-programmed ECU-C.

### 3.2 Selecting an Installation Location for the ECU-C

- Choose a location that is electrically as close to the array as possible.
- The ECU-C is NOT rated for outdoor use, so if installing outdoors near a junction box or breaker panel, make sure you enclose it in an appropriate weatherproof NEMA electrical box.
- **Avoid to install in the place children can not touch.**

#### 1) Power Distribution Cabinet Installation

If you use the energy communicator in power distribution cabinet:

- Pull the four snap out with a screwdriver.

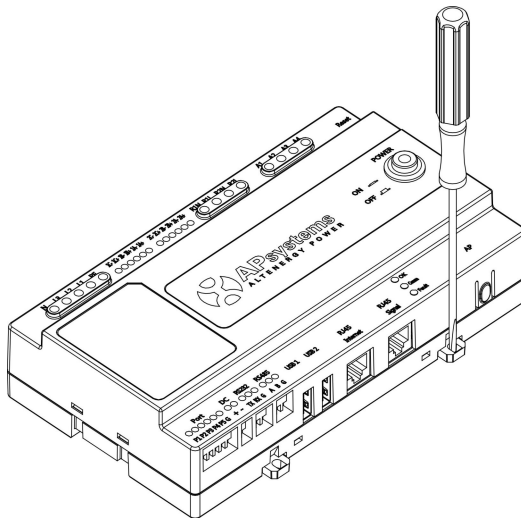


Figure 6



### 3.Hardware Installation

- Attach two buckles below in the edge of the guide, press two buckles above, then embed to the edge of the guide.

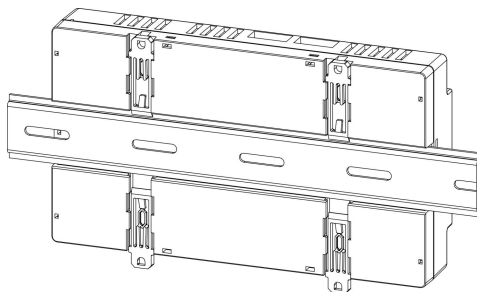


Figure 7



#### NOTICE

Do not put the antennas inside a metal box, that will block the signal. If the roof is metal, please use this long cable antenna, and place it outside or on roof.

#### 2) Using a Wall Mount

When mounting the ECU-C to a wall, make sure to select a cool, dry indoor location.

- According to the size of an icon, The energy communicator is fixed on the wall with two Wall screws or wall anchors.
- Four M4 screws + spacers are fixed to the wall, and the punch sizes are as follows:

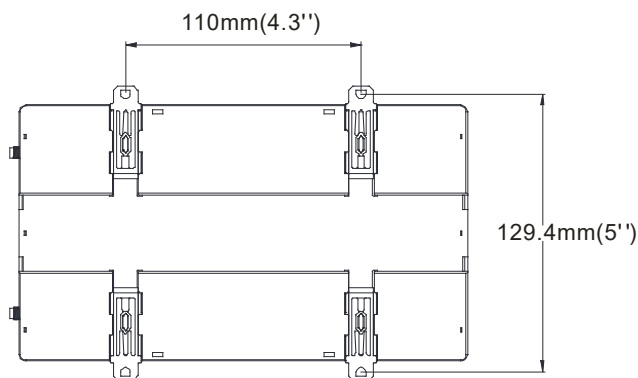


Figure 8

## 3. Hardware Installation

### 3.3 Cable Connections

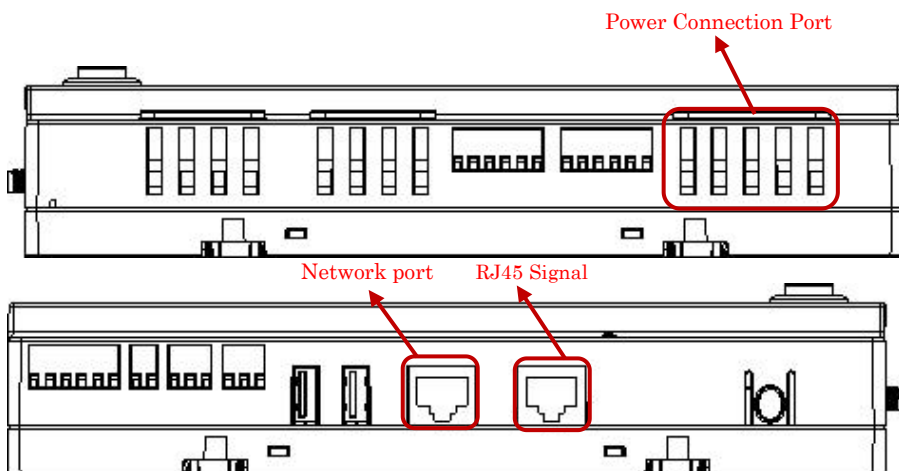


Figure 9

- Connect the power cable to the power connection port on the top of the ECU-C.(Can also be DC power supply).
- Connect the supplied LAN cable to the network port on the bottom of the ECU-C.

### 3.4 RJ45 Signal connection

Plug the RJ45 connector in the package to RJ45 Signal port.

### 3.5 Internet Connection

There are three different approaches to connecting the ECU-C to the Internet:

Option 1: Direct LAN cable connection.

- 1) Make sure the LAN cable is connected to the network port on the bottom of the ECU-C.
- 2) Connect the LAN cable to a spare port on the broadband router.

### 3. Hardware Installation

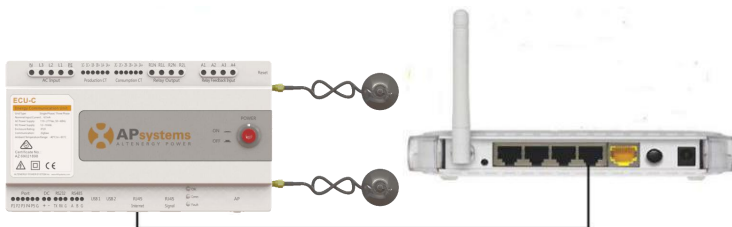


Figure 10

#### Option 2: Wireless Connection.

Use ECU-C internal WLAN (see Managing the WLAN Connection, pg. 23).

#### Option 3: Using a PLC bridge:

- 1) Make sure the LAN cable is connected to the network port on the bottom of the ECU-C.
- 2) Connect the LAN cable to the “send” unit of the PLC bridge.
- 3) Connect a LAN cable from the “receive” unit of the PLC bridge to a spare port on the broadband router (refer to the bridge users manual for specific operating instructions).

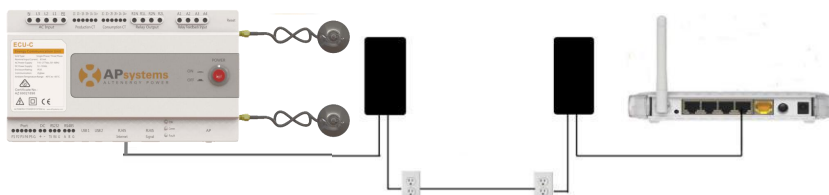


Figure 11

#### NOTICE

The network cable in the package can be used to connect the ECU-C with PC directly. One side is connected with the ECU-C and the other side is connected with the PC. Then change the IP address and the network mask to 192.168.131.1 and 255.255.255.0, respectively.

#### NOTICE

1. A PLC bridge uses the power line to communicate and requires both a “send” and “receive” unit.
2. The quality and length of the LAN cable will affect the ECU-C communication quality. You can use a Switch to enhance the communication quality if necessary.

## 3. Hardware Installation

### 3.6 Current transformer interface

By installing Current Transformer(CT), the integrated meter in ECU-C can measure the production&consumption power and energy. Please refer to the picture.

It is mandatory to install the current transformer on production and consumption side to get the anti-backflow function.

Anti-backflow function manages inverters one by one: it turns on/off each inverter through zigbee communication, in order to get production inferior or equal to consumption.

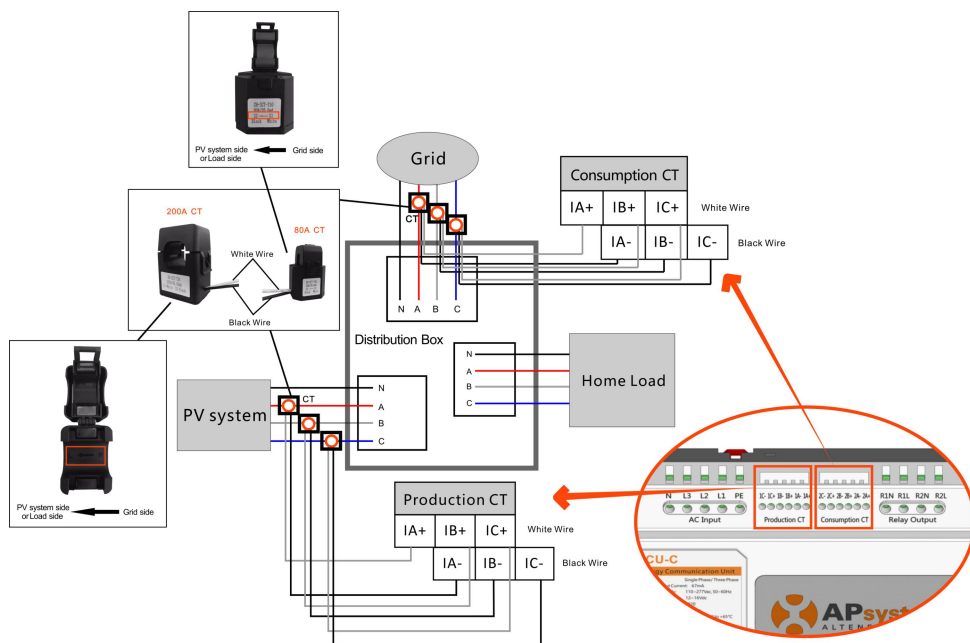


Figure 12

#### NOTICE

Please ensure that the ECU-C is in a power off state when installing the transformer. APsystems can provide the current transformers, please contact us or our distributors.

## 3. Hardware Installation

### 3.7 Contactor connection

ECU-C provides two contact driver signal interface, two-way contact signal interface.

| Interface | Interface description  |
|-----------|--|
| R1L       | The first road contactor drives the output L, and is connected with the power supply interface L1. |
| R1N       | The first road contactor drives the output N, and is connected with the power supply interface N.  |
| R2L       | Second road contactor driver output L, with the power supply interface L1.                         |
| R2N       | Second road contactor driver output N, with the power supply interface N.                          |
| A1 A2     | First contact feedback signal input, non polarity.   |
| A3 A4     | Second way contactor feedback signal input, non polarity.  |

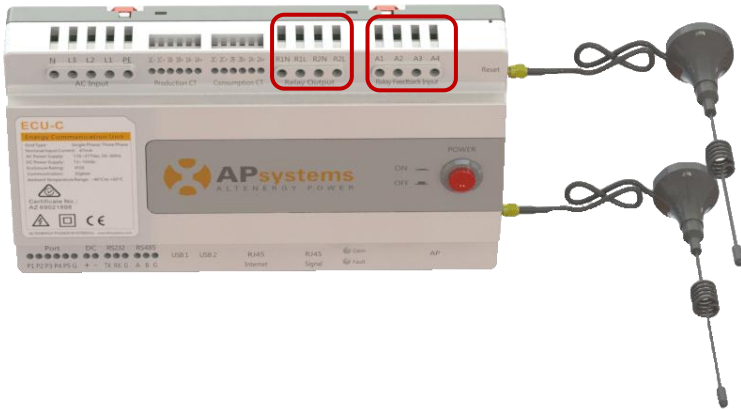


Figure 13

ECU-C automatic detection and judgment of the current power grid environment, through the drive signal interface to control the opening or closing of the contactor. The feedback signal interface and NO of contactor are often connected to inform the ECU that the contactor is effectively closed.

## 4.Basic Operation

### 4.1 Restore the factory set operation

The following diagram shows the connetions on the bottom of APsystems the ECU-C.

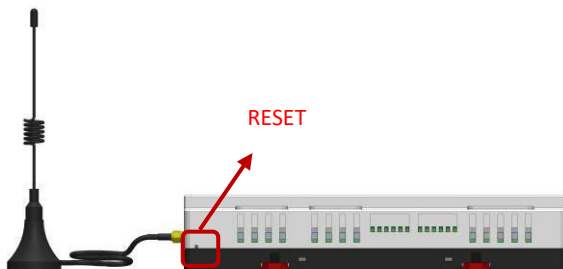


Figure 14

To restore the ECU-C's factory settings, simply press the "Reset" button for three seconds or longer. The unit will automatically return to its default settings.

## 5. Local Network Interface

### 5.1 Connecting to the ECU-C via the Local Wireless

1. Turn on the Wi-Fi function on PC or phone.
2. Scan the ECU's SSID which named "ECU-WIFI\_XXXX" (the "xxxx" refers to the last 4 numbers of the ECU-C ID), connect to the ECU-C's SSID. The first connection has no password.
3. Using a standard web browser on your computer, Enter the ECU's IP 172.30.1.1 into browser.

The ECU-C's "splash" screen is displayed.

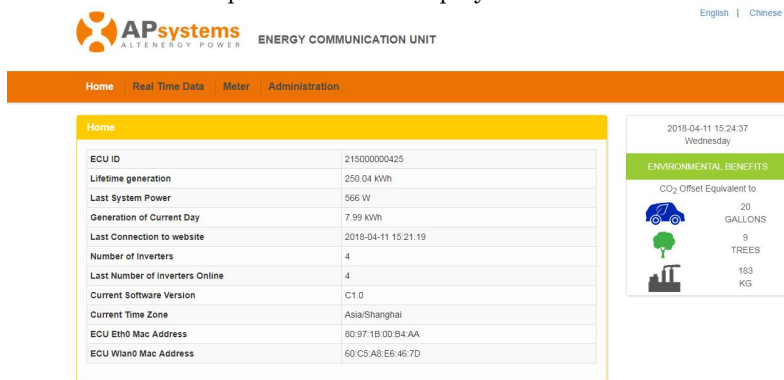


Figure 15

### 5.2 Home Screen

Select "Home" at the top of the page.  
The Home Page is displayed.



Figure 16

## 5. Local Network Interface

|                                     |  |
|-------------------------------------|--|
| ECU-C ID:                           | This is a unique number that identifies this specific ECU-C.                                     |
| Lifetime Generation:                | Amount of power this system has generated during its lifetime.                                   |
| Last System Power:                  | Amount of power the system was generating during its last polling cycle.                         |
| Generation of<br>Current Day:       | Amount of power that has been generated during the most current day.                             |
| Last connection to<br>Website:      | The last time the ECU-C checked into the central APsystems EMA database.                         |
| Number of Inverters:                | Number of inverters that have programmed into the ECU-C.   |
| Last Number of<br>Inverters Online: | Number of inverters that are checking in with the ECU-C.   |
| Current Software<br>Version:        | Current version of the firmware.   |
| Current Timezone:                   | Time zone that has been programmed into the ECU-C.   |
| ECU-C Eth0 Mac<br>Address           | Address of ECU-C's LAN.  |
| ECU-C Wlan0 Mac<br>Address          | Address of the ECU-C's internal WLAN.  |
| Inverter Comm.<br>Signal Level      | The communication strength between inverters and ECU-C. The range is 1-5, the higher the better. |



## 5. Local Network Interface

### 5.3 Real-time Data Screen

#### a) Real Time Data

To view the real-time system operation data statistics for your solar array, click “Real Time Data” from the ECU-C home screen to navigate to the real-time data screen.

The Real Time Data screen is displayed.

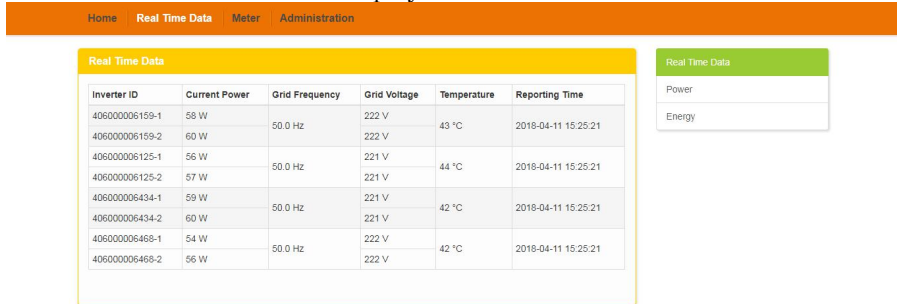


Figure 17

#### b) Trend of system power

To view the system power of any period, click "Power" at the real-time data page.

The Trend of system power screen is displayed.

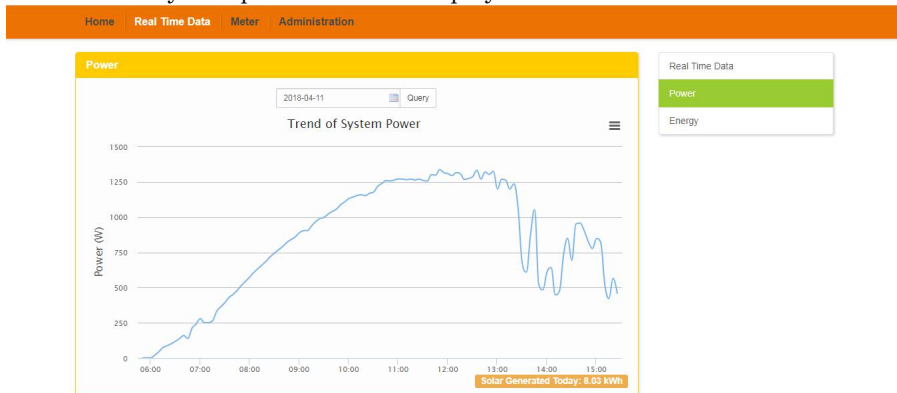


Figure 18

#### c) Power generation statistics

Press “Energy” at the real-time data page to view the system power generation of your solar array.

## 5. Local Network Interface

The Power generation statistics screen is displayed.  
Performance data for the current week:



Figure 19

Performance data for the current month.

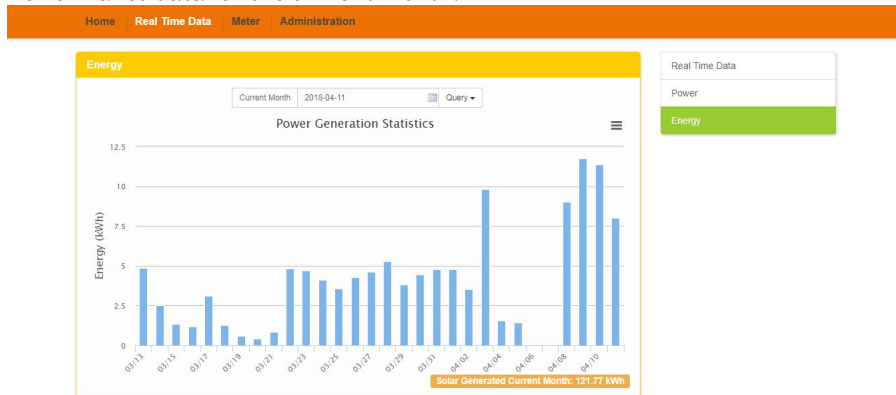


Figure 20

## 5. Local Network Interface

Performance data for the current year.



Figure 21

### 5.4 Meter Screen

#### a) Trend of power

To view the production power, consumption power and Usage power of any period, click "Power" at the "Meter" page.

The Trend of power screen is displayed.



Figure22

## 5. Local Network Interface

### b) Energy statistics

Press "Energy" at the "Meter" page to view the production energy , consumption energy and usage energy.

The energy statistics screen is displayed.

Performance data for the current week:



Figure23

Performance data for the current month:

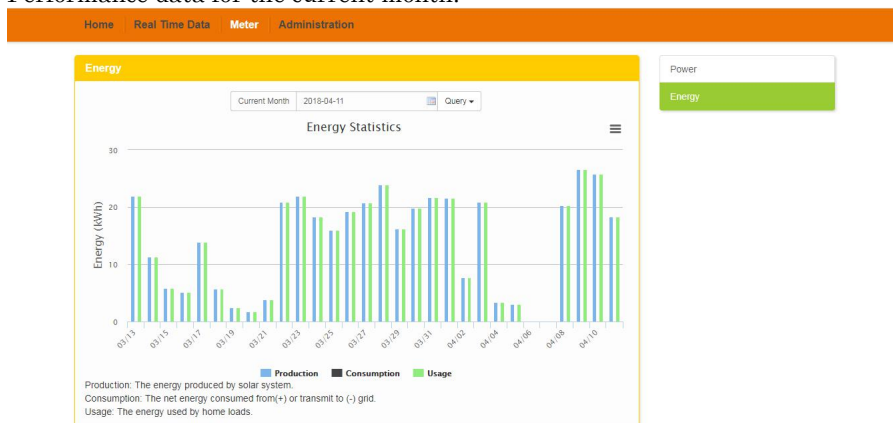


Figure24

## 5. Local Network Interface

Performance data for the current year:

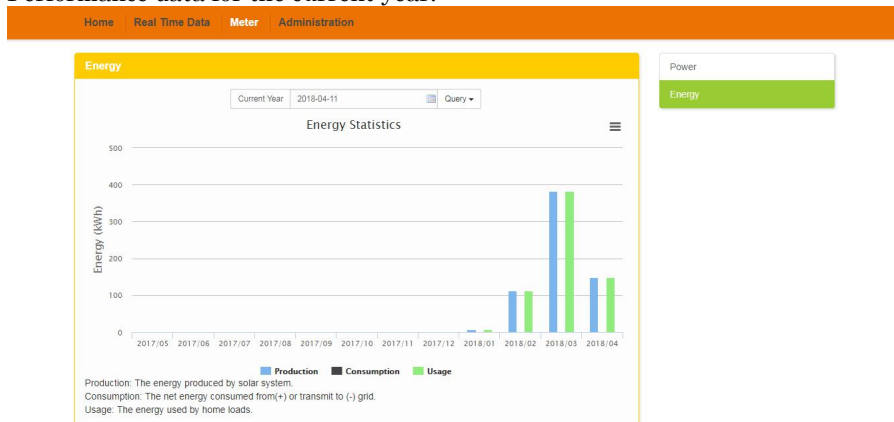


Figure25

### 5.5 Administration Screen

#### a) Managing Inverter IDs

The inverter IDs must be programmed into the ECU-C for the ECU-C to recognize the inverters. The ECU-C will NOT auto-sense the inverters.

Initial Programming of the ECU-C with the Inverter IDs.



#### NOTICE

The "Enter Inverter ID" window field will be blank if you have not yet entered any of the inverter IDs.

- 1) Select "Administration" at the top of the page.

The ID Management page is displayed.

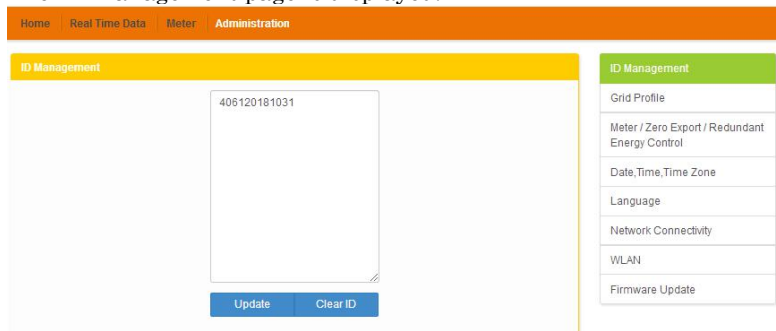


Figure 26

## 5. Local Network Interface

If you manually input the inverter IDs -

- 1) Enter each 12-digit inverter ID.
- 2) Once all the ID have been entered, press “Update”. “ID updated successfully!” will displayed after a few seconds.

If using the Scanning Gun to input the inverter IDs -

- 1) Copy the scanned IDs into the ID Management box
- 2) Press “Update”. The message “ID updated successfully !” will be displayed after few seconds.

### Adding Additional Inverter IDs

If the number of inverter ID displayed on the page is less than the actual number of inverters installed:

- 1) Select “Administration” at the top of the page.

The ID Management page with the existing inverter IDs is displayed.



Figure 27

- 2) Scroll down to the end of the existing list.
- 3) Enter the new ID.
- 4) Press “Update”. The “ID updated successfully!” message will be displayed after few seconds.

### Deleting an Existing Inverter ID

If the number of inverter IDs displayed on the page is more than the actual number of inverters installed:

- 1) Select “Administration” at the top of the page.

The ID Management page with the existing inverter IDs is displayed.

## 5. Local Network Interface

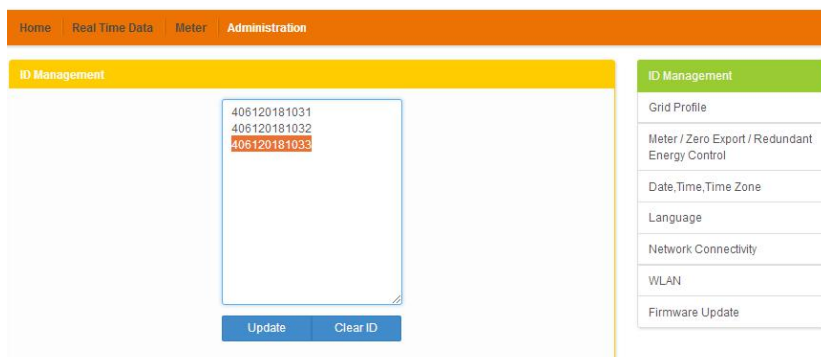


Figure 28

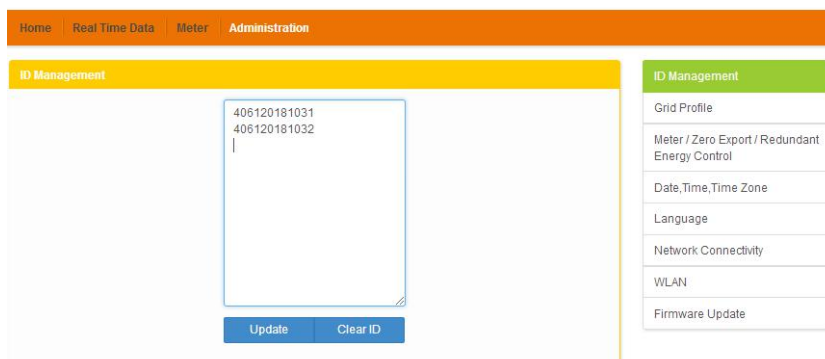


Figure 29


- 2) Highlight the IDs to be deleted from the list.
- 3) Press "Update". The "ID updated successfully!" message will be displayed after few seconds.

## 5. Local Network Interface

### Modify an Existing Inverter ID


If the inverter ID displayed on the page does not match the actual inverters ID installed, modify the wrong inverters ID from “Input Inverter ID” section, then click “Update”. The message “ID updated successfully!” will be displayed after few seconds.

The ID Management page with the existing inverter IDs is displayed:

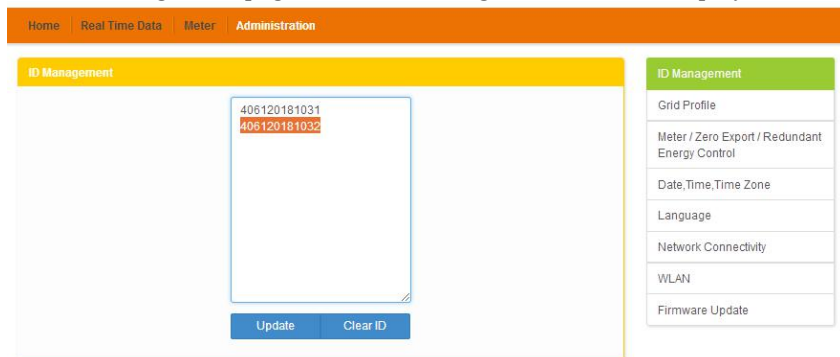

The screenshot shows the 'ID Management' page. At the top is a navigation bar with 'Home', 'Real Time Data', 'Meter', and 'Administration'. The main content area has a yellow header 'ID Management' and a large text input field containing two IDs: '406120181031' and '406120181032'. Below the input field are 'Update' and 'Clear ID' buttons. On the right is a green sidebar menu with 'ID Management' and a list of settings: 'Grid Profile', 'Meter / Zero Export / Redundant Energy Control', 'Date, Time, Time Zone', 'Language', 'Network Connectivity', 'WLAN', and 'Firmware Update'.

Figure 30

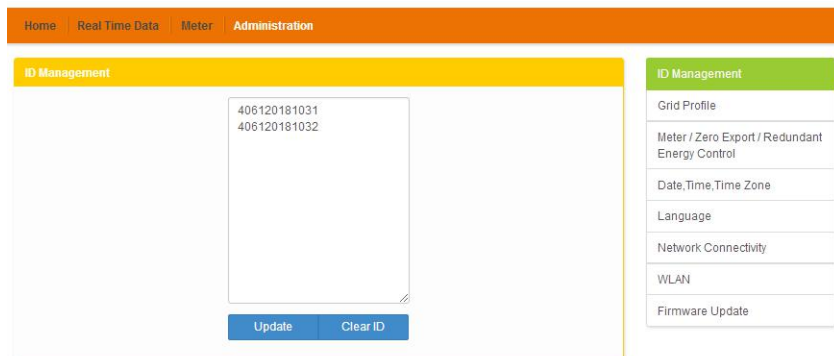

This screenshot is identical to Figure 30, showing the 'ID Management' page with the same navigation bar, input field containing '406120181031' and '406120181032', and the sidebar menu.

Figure 31



## 5. Local Network Interface

### Clearing inverter IDs

Pressing “Clear ID” deletes ALL of the inverter IDs from the list.

The ID Management page with the existing inverter IDs is displayed.

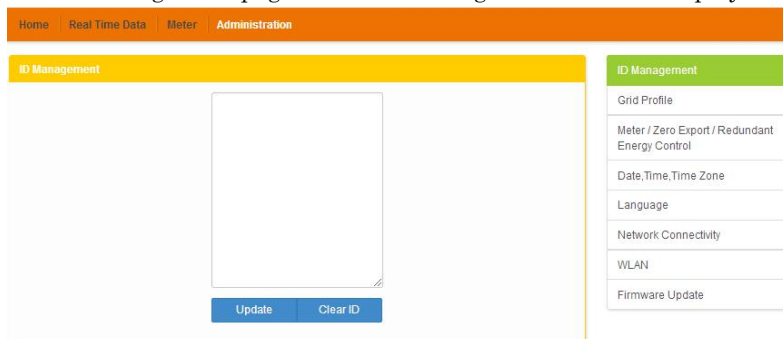


Figure 32



### NOTICE

Combine the above two steps when swapping out an inverter. Add the new inverter, and Delete the old one. Remember to follow up with the same process on the APsystems EMA because the ECU-C and EMA need to be in sync with each other.

## 5. Local Network Interface

### b) Grid Profile

User needs to select grid profile when installing the system.



#### NOTICE

If you select the wrong grid profile, the inverters will not work normally.

HomeReal Time DataMeterAdministration

Grid Profile

Grid profileUS CA Rule 21

| Parameter                   | Value                               | Units(Range) |
|-----------------------------|-------------------------------------|--------------|
| Under voltage (stage 2)     | 120.0                               | V            |
| Over voltage (stage 2)      | 265.0                               | V            |
| Under voltage (stage 3)     | 168.0                               | V            |
| Over voltage (stage 3)      | 256.0                               | V            |
| Under voltage 2 trip time   | 1.2                                 | s            |
| Over voltage 2 trip time    | 0.12                                | s            |
| Under voltage 3 trip time   | 10.5                                | s            |
| Over voltage 3 trip time    | 12.5                                | s            |
| Under frequency (stage 1)   | 57.0                                | Hz           |
| Over frequency (stage 1)    | 62.0                                | Hz           |
| Under frequency (stage 2)   | 58.5                                | Hz           |
| Over frequency (stage 2)    | 60.5                                | Hz           |
| Under frequency 1 trip time | 0.12                                | s            |
| Over frequency 1 trip time  | 0.12                                | s            |
| Under frequency 2 trip time | 299.5                               | s            |
| Over frequency 2 trip time  | 299.5                               | s            |
| Reconnection time           | 67.0                                | s            |
| Under voltage (stage 4)     | 65.0                                | V            |
| Under voltage 4 trip time   | 20.5                                | s            |
| Ride through mode           | <input checked="" type="checkbox"/> |              |
| Power factor                | +0.9                                |              |
| Volt var mode set           | <input type="checkbox"/>            |              |
| Volt watt mode set          | <input type="checkbox"/>            |              |
| Over frequency watt set     | <input type="checkbox"/>            |              |
| Under frequency watt set    | <input type="checkbox"/>            |              |

ResetSave

Actual valueRead parameters

| Inverter ID  | Under voltage (stage 2) | Over voltage (stage 2) | Under voltage (stage 3) | Over voltage (stage 3) |
|--------------|-------------------------|------------------------|-------------------------|------------------------|
| 406120181031 | 100                     | 221                    | 60                      | 288                    |

|  |
|--|
| ID Management                                  |
| Grid Profile                                   |
| Meter / Zero Export / Redundant Energy Control |
| Date,Time,Time Zone                            |
| Language                                       |
| Network Connectivity                           |
| WLAN   |
| Firmware Update                                |

Figure 33

# 5.Local Network Interface

## c) Meter/Zero Export

When the meter function is turned on, users could see the production 、consumption or usage power and energy on the Meter page.

Home | Real Time Data | Meter | Administration

Meter / Zero Export / Redundant Energy Control

Meter Display: OPEN

Zero Export: CLOSE

Power Limit: 1.5 KW

Redundant Energy Control: CLOSE

Power Limit: 1.5 KW

Save

ID Management  
Grid Profile  
Meter / Zero Export / Redundant Energy Control  
Date,Time,Time Zone  
Language  
Network Connectivity  
WLAN  
Firmware Update

Figure 34

The zero export function could limit the power export to the grid. Users could set the maximum export power when the zero export function is turned on.

Home | Real Time Data | Meter | Administration

Meter / Zero Export / Redundant Energy Control

Meter Display: OPEN

Zero Export: OPEN

Power Limit: 1.5 KW

Redundant Energy Control: CLOSE

Power Limit: 1.5 KW

Save

ID Management  
Grid Profile  
Meter / Zero Export / Redundant Energy Control  
Date,Time,Time Zone  
Language  
Network Connectivity  
WLAN  
Firmware Update

Figure 35

## 5. Local Network Interface

The redundant energy control function could make the electric equipment to use redundant energy. If the redundant power is more than power limit, ECU-C will close the relay.

The screenshot shows the 'Administration' page with a sidebar on the right containing links: ID Management, Grid Profile, Meter / Zero Export / Redundant Energy Control (highlighted), Date, Time, Time Zone, Language, Network Connectivity, WLAN, and Firmware Update. The main content area is titled 'Meter / Zero Export / Redundant Energy Control' and contains three sections: 'Meter Display' with a dropdown set to 'OPEN', 'Zero Export' with a dropdown set to 'CLOSE' and a 'Power Limit' of 1.5 KW, and 'Redundant Energy Control' with a dropdown set to 'OPEN' and a 'Power Limit' of 1.5 KW. A 'Save' button is at the bottom.

Figure 35

### c) Changing the Date, Time Zone

It is critical for accurate power production reporting that the ECU-C is programmed with the correct date, time, and time zone.

- 1) Select “Administration” at the top of the page.
- 2) Select “Date, Time, Timezone”.

The Date, Time, Time Zone page is displayed:

The screenshot shows the 'Date, Time, Time Zone' page. The sidebar is the same as in Figure 35, with 'Date, Time, Time Zone' highlighted. The main content area has three sections: 'Date Time' with a text field showing '2019/03/12 13:50:43' and an 'Update' button; 'Time Zone' with a dropdown menu showing 'Asia/Shanghai' and an 'Update' button; and 'NTP Server' with a text field showing '0.asia.pool.ntp.org' and an 'Update' button.

Figure 36

- 3) Adjust the correct date in the “Date Time” field
- 4) Select the correct time zone from the Time Zone pull down.



### NOTICE

You can skip step 3 by selecting the correct time zone. Selecting the correct time zone automatically updates both the date and current time.

## 5. Local Network Interface

### d) Changing the Language

Users can switch language between English and Chinese.

- 1) Select “Administration” at the top of the page.
- 2) Select “Language”.

The Language management page is displayed:

The screenshot shows the 'Administration' page with the 'Language' sub-page selected. The 'Current Language' dropdown menu is open, showing 'English' (selected), 'English', and 'Chinese'. The right sidebar contains a list of navigation options: ID Management, Grid Profile, Meter / Zero Export / Redundant Energy Control, Date, Time, Time Zone, Language (highlighted), Network Connectivity, WLAN, and Firmware Update.

Figure 37

- 3) Select the language from the Current Language pull down.
- 4) Press “Update”.

### e) Managing the Network Connection

The default network connection setting for the ECU-C is “DHCP,” which allows the ECU-C to automatically establish a connection assignment from the router. The ECU-C can be assigned a static.

IP Address if the network design requires it.

- 1) Select “Administration” at the top of the page.
- 2) Select “Network Connectivity”.

The Network Connectivity page is displayed:

The screenshot shows the 'Network Connectivity' page. It displays the 'Eth0 IP address' as '192.169.1.139'. Under 'IP Settings', there are two radio buttons: 'Obtain an IP address automatically' (selected) and 'Use the following IP address'. An 'Update' button is located below the settings.

Figure 38

## 5. Local Network Interface

- 3) Select “Obtain an IP address automatically”.
- 4) Press “Update”.

### f) Managing the WLAN connection

The ECU-C can both work in two modes: WLAN and Local Wireless Access. In WLAN mode, the ECU-C can connect to a router by Wi-Fi. In Local Wireless Access mode, user's phone or PC can connect to ECU-C to access local web.

#### WLAN mode

- 1) Select “Administration” at the top of the page.
- 2) Select “WLAN”, and click “WLAN” tab.

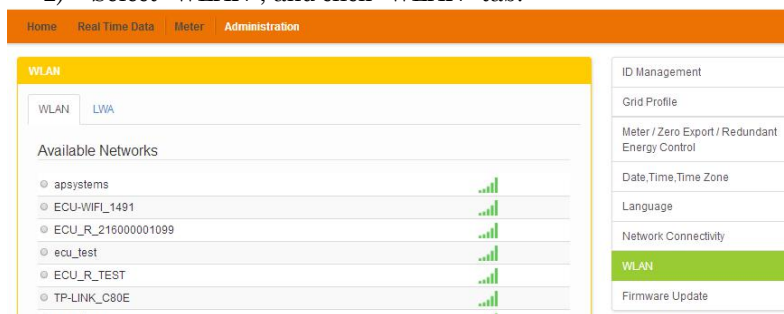


Figure 39

- 3) The ECU-C will display the available networks.  
Select the button next to the available network that you wish to access SSID, and a password entry field will be displayed below the network name. Enter the password into the password entry field, then click “Connect”.

The WLAN Connectivity page is displayed.

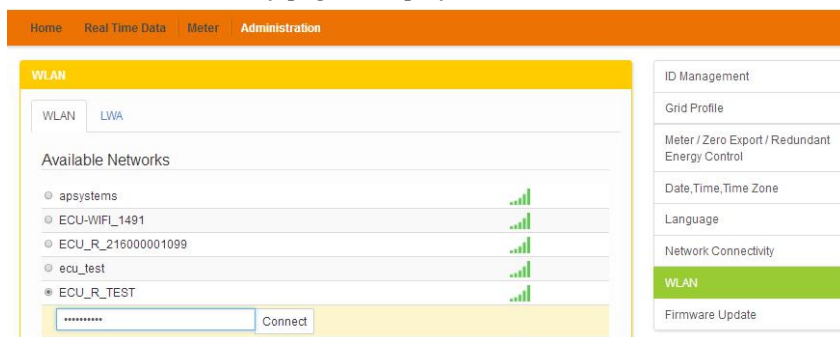


Figure 40

## 5. Local Network Interface

- 4) If ECU-C has connected to the router, it will display the SSID and IP address. Now you can connect by PC or phone to the router. Enter the ECU-C's IP (e.g., 192.168.4.119) into the browser to access the local web.

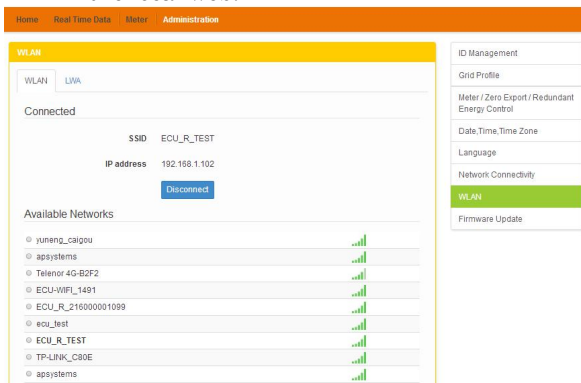


Figure 41

### Local Wireless Access mode

- 1) Scan the ECU-C's SSID on PC and phone, and connect to ECU-C. Enter the ECU-C's IP 172.30.1.1(The IP is fixed) into browser to access the local web.
- 2) On the page, you can modify SSID, Channel, Safe Type and Password. If you don't select the Safe Type, the Password is hidden.

The Local Wireless Access page is displayed.

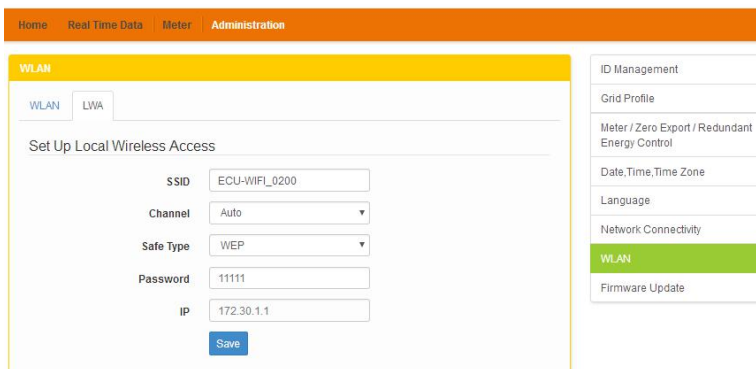


Figure 42

## 5. Local Network Interface

### g) Firmware Update

Select the ECU-C upgrade package, and click OK to upgrade ECU-C firmware. The upgrade package can be downloaded at [www.APsystems.com](http://www.APsystems.com).

The screenshot shows a web interface for firmware updates. At the top is an orange navigation bar with links: Home, Real Time Data, Meter, and Administration. Below this is a yellow header for the 'Firmware Update' section. The main content area is white and contains the text 'Upload Package' followed by a text input field, a 'Browse' button, and a blue 'OK' button. On the right side, there is a vertical sidebar with a list of menu items: ID Management, Grid Profile, Meter / Zero Export / Redundant Energy Control, Date, Time, Time Zone, Language, Network Connectivity, WLAN, and Firmware Update. The 'Firmware Update' item is highlighted with a green background.

Figure 43



## 6.Remote ECU-C Management (EMA)

The ECU-C has been designed with remote connect functionality. You can access this remote functionality through the APsystems Energy Monitoring & Analysis (EMA) website, using your installer login credentials. Changes made remotely through the EMA do not take effect until the ECU-C's next reporting cycle. The ECU-C must first be installed with Internet connectivity.

The ECU-C remote functionality allows you to do the following:

- Set Time Zones
- Manage Inverter IDs

There are additional ECU-C functions available but the instructions are not outlined in this document. If you need to access one of the following features, please contact APsystems Technical Support:

- Change system parameters
- Turn the inverters ON and OFF
- Reset GFDI
- Reset Power Settings







### NOTICE

This section of the documentation assumes you have a working knowledge of the APsystems EMA.

1) Log onto your APsystems EMA account.

Your Customer List within the Installer Portal is displayed.

2) Select the customer's ECU-C you want to manage and click on the username in the "Customer Account" column.



English | Settings | Sign out

Bluefrog  
Olympia, Washington, United States

#### CUSTOMER LIST

| ID | Customer Account              | ECU ID       | True Name      | Country       | State      | City         | System Size(KW) | Register Date | System Status | Action |
|----|-------------------------------|--------------|----------------|---------------|------------|--------------|-----------------|---------------|---------------|--------|
| 1  | <a href="#">crlho</a>         | 203000014617 | Mike           | United States | WA         | La Center    |                 | 2015-11-18    |               | Delete |
| 2  | <a href="#">Steven Langer</a> | 203000024740 | Steven Langer  | United States | WA         | Camas        | 8               | 2015-05-10    |               | Delete |
| 3  | <a href="#">NickDrouin</a>    | 203000006557 | Nicolas Drouin | United States | WA         | Bellevue     | 10.0            | 2015-05-05    |               | Delete |
| 4  | <a href="#">pawson</a>        | 203000015787 | Paul User      | United States | NY         | Smithtown    | 5               | 2015-01-31    |               | Delete |
| 5  | <a href="#">dkieszcz</a>      | 203000016109 | Don Kieszcz    | United States | CA         | Camarillo    |                 | 2014-12-24    |               | Delete |
| 6  | <a href="#">ethomason</a>     | 203000012880 | Earl Thomason  | United States | WA         | Vancouver    | 7.5             | 2014-11-14    |               | Delete |
| 7  | <a href="#">jlopez</a>        | 203000014540 | Jaime Lopez    | United States | CA         | South Gate   |                 | 2014-10-07    |               | Delete |
| 8  | <a href="#">Schert</a>        | 203000014624 | Phil Schert    | United States | CA         | Newbury Park | 8.25            | 2014-10-03    |               | Delete |
| 9  | <a href="#">Rblac</a>         | 203000012755 | Rachael Rblac  | United States | WA         | Spokane      | 3.3             | 2014-06-20    |               | Delete |
| 10 | <a href="#">PWSA</a>          | 203000008668 | Steve Coenen   | United States | California | Davis        |                 | 2014-02-07    |               | Delete |

Displaying 1 to 10 of 12 items.

1

2

>

>|

Total 2, Go to 1

Go

Figure 44

## 6.Remote ECU-C Management (EMA)

### 6.1 ECU-C Configuration/ECU-C Status Page

ECU-C SETTING page under the Remote control page.

The screenshot displays the 'ECU Status' page in the APsystems EMA interface. The left sidebar is active on the 'REMOTE CONTROL' section, with 'ECU STATUS' highlighted. The main content area shows the 'ECU Status' header with a note: 'If the ECU Connection Status is changed, Please change it.' Below this, the 'ECU STATUS' section contains two dropdown menus: 'ECU ID' (set to 203000006557) and 'ECU Connection Status' (set to normal). A 'Submit' button is located to the right of the 'ECU Connection Status' dropdown. The top right of the page shows links for 'English', 'Settings', and 'Sign out', along with the user's name 'Bluefrog' and location 'Olympia, Washington, United States'.

Figure 45

The ECU-C SETTING tab allows you to:

#### Set Time Zones

- The ECU-C time zone can be set or adjusted remotely through the ECU-C setting tab. If the time zone is not properly set, the solar production data will not post properly on the EMA site.

#### Load Inverter IDs

- Once the ECU-C has been installed you can access the ECU-C remotely to add the inverter IDs. Until the inverter IDs are loaded, the ECU-C will not be able to collect data from the inverters.

#### Update Inverter ID list

- If an inverter(s) is added or swapped for a new unit, then the ECU-C's programmed list of inverters will need to be updated.

## 6.Remote ECU-C Management (EMA)

### 6.2 Setting the ECU-C Time Zone

- 1) Click the remote control menu to enter the remote settings page
- 2) Select the “ECU-C SETTING” tab.

The ECU-C Configuration page is displayed.

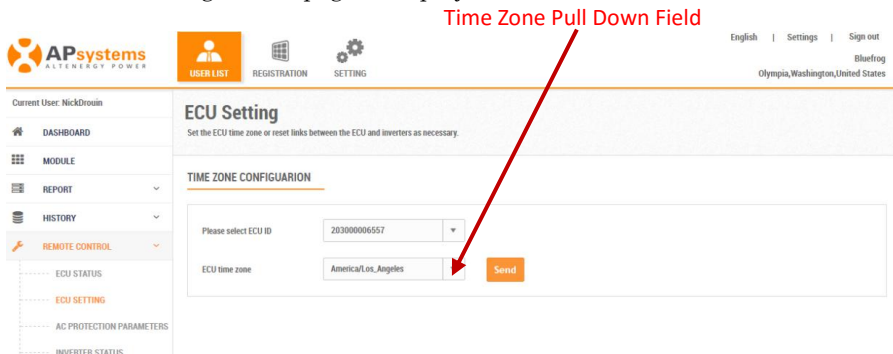


Figure 46

- 3) Using the “Time Zone” pull down field, select the appropriate time zone.
- 4) Press “Send”.

### 6.3 Managing Inverter IDs and Updating the Inverter ID List

- 1) Select the “ECU-C SETTING” tab.

The Inverter Links Configuration page is displayed

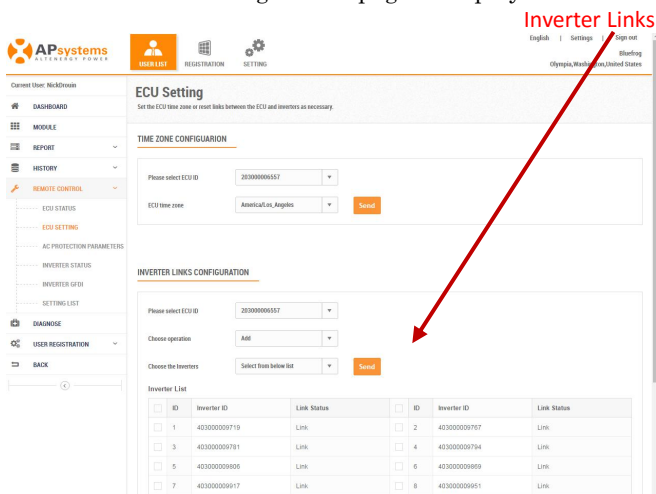


Figure 47

## 6.Remote ECU-C Management (EMA)

### Operation Selection (Add or Delete)

The screenshot displays the 'REMOTE CONTROL' interface with a sidebar menu on the left containing options like ECU STATUS, ECU SETTINGS, AC PROTECTION PARAMETERS, INVERTER STATUS, INVERTER GRAPH, SETTINGS LIST, DIAGNOSE, USER REGISTRATION, and BACK. The main area is titled 'INVERTER LINKS CONFIGURATION' and includes fields for 'Please select ECU ID' (set to '203000000557'), 'Choose operation' (set to 'Add'), and 'Choose the Inverters' (set to 'Input the Special Ones'). A 'Send' button is located next to the 'Choose the Inverters' field. Below these fields is an 'Inverter List' table with columns for 'ID' and 'Inverter ID'. Two red arrows are overlaid on the image: one points from the text 'Operation Selection (Add or Delete)' to the 'Add' operation dropdown, and the other points from the text 'Inverter ID Field' to the 'Input the Special Ones' dropdown.

Figure 48

Adding Complete List of Inverter IDs for a Newly Installed System

There are two different approaches to add the inverter IDs:

Option 1: Webpage -

1. Select Add inverter based on registration list
  - 1) Select “Add” in Operation Selection.
  - 2) Select the Inverters “select from below list”.
  - 3) Select the inverter to be added
  - 4) Press “Send”.
2. The specified inverter ID
  - 1) Select “Add” in Operation Selection.
  - 2) Select the Inverters “input the special ones”.
  - 3) Enter all of the inverter IDs into the Inverter ID Field (one per line).
  - 4) Press “Send”.

Option 2: Mobile phone-

- 1) Log onto ArrayAPP.
- 2) Select user account.
- 3) Select Link ECU.
- 4) Press “Send”.

Delete IDs from Inverter List

1. Select Delete inverter based on registration list
  - 1) Select “Delete” in Operation Selection.
  - 2) Select the Inverters “select from below list”.
  - 3) Select the inverter to be deleted.
  - 4) Press “Send”.
2. The specified inverter ID
  - 1) Select “Delete” in Operation Selection
  - 2) Select the Inverters “input the special ones”.
  - 3) Enter all of the inverter IDs into the Inverter ID Field (one per line).
  - 4) Press “Send”.
3. Delete all
  - 1) Select “Clear” in Operation Selection.
  - 2) Press “Send”.

## 7. Technical Data

| Model                          | ECU-C   |
|--------------------------------|---|
| <b>Communication Interface</b> |   |
| Communication Method           | ZigBee  |
| Integrated Wi-Fi               | 802.11g/n   |
| Ethernet                       | 10/100M Auto-sensing, Auto-negotiation  |
| USB Interface                  | 5Vdc-0.5A Output X2   |
| RS232                          | Standard  |
| RS485                          | Standard  |
| RJ45                           | Standard  |
| <b>Power Supply</b>            |   |
| AC Power Supply                | 110~277VAC, 50~60Hz Single Phase - ( 3-Phase Optional)  |
| DC Power Supply                | 12~16V  |
| Power Consumption              | 3W  |
| <b>Mechanical Data</b>         |   |
| Dimensions (W×H×D)             | 210 x 120 x 41mm (8.3" x 4.7" x 1.6")   |
| Weight                         | 500g (1.1lbs)   |
| Ambient Temperature Range      | -40°C to +65°C (-40°F to 149°F)   |
| Cooling                        | Nature Convection; No Fans  |
| Enclosure Environmental Rating | Indoor - IP20 (NEMA 1)  |
| <b>Other Features</b>          |   |
| Grid Type                      | Single Phase/ Three Phase   |
| Relay Driver                   | Control external AC contact or relay  |
| Relay Feedback                 | Get relay signal, could do anti-backflow control, and energy management                                   |
| Digital Input                  | For external control device connection  |
| CT Sensor                      | Production and consumption metering   |
| Meter Accuracy                 | Integrated PV production metering (+/- 0.5% via CT) and optional consumption monitoring (+/- 2.5% via CT) |
| <b>Compliance</b>              |   |
| Compliance                     | IEC/EN61010-1, EN61000-6-2, EN61000-6-4, 2014/53/EU, EN301489-1/-17, EN62311, EN 300328                   |

Specifications subject to change without notice.

Please ensure you are using the most recent update found at [www.APSystems.com](http://www.APSystems.com).

2019/03/19 Rev2.0

### :: WEEE (for Europe )



#### Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Contact Information

ALTENERGY POWER SYSTEM Inc.

[www.APsystems.com](http://www.APsystems.com)

### **APsystems Jiaxing China**

No. 1, Yatai Road, Nanhu District, Jiaxing, Zhejiang

Tel: +86 573 8398 6967

Mail: [info@altenergy-power.com](mailto:info@altenergy-power.com)

### **APsystems Shanghai China**

Rm.B403 No.188, Zhangyang Road, Pudong, Shanghai 200120,P.R.C

Tel: 021-3392-8205

Mail: [info.global@APsystems.com](mailto:info.global@APsystems.com)

### **APsystems Guadalajara:**

AV. Lazaro Cardenas 2850-5° Piso, Colonia Jardines del Bosque C.P. 44520, Guadalajara, Jalisco

Tel:52 (33) -3188-4604

Mail: [info.latam@APsystems.com](mailto:info.latam@APsystems.com)

### **APsystems America**

600 Ericksen Ave NE, Suite 200 Seattle, WA 98110

Tel: 844-666-7035

Mail: [info.usa@APsystems.com](mailto:info.usa@APsystems.com)

### **APsystems Australia**

Suite 502, 8 Help Street, Chatswood NSW 2067 Australia

Tel: 61 (0)2-8034-6587

Mail: [info.apac@APsystems.com](mailto:info.apac@APsystems.com)

### **APsystems Europe**

Cypresbaan 7, 2908 LT,Capelle aan den Ijssel The Netherlands

Tel: +31-10-2582670

Mail: [info.emea@APsystems.com](mailto:info.emea@APsystems.com)

### **APsystems EMEA**

Rue des Monts dor ZAC de Folliouses Sud-Les Echets 01700 Miribel, France

Tel: +33-481-65-60-40

Mail: [info.emea@APsystems.com](mailto:info.emea@APsystems.com)